

How To Swap Your Steering Wheel

SPORT STEERING WHEEL REMOVAL



TOOLS NEEDED: 18mm Socket, Extension, Ratchet or Impact Driver, H3 Allen Key, Mallet

- Step One- Remove the 6 Allen head screws around the trim ring. The trim ring, the center button, and the steering wheel will all be free from the steering hub.



ONCE THE 6 ALLEN HEADS HAVE BEEN REMOVED THE STEERING WHEEL MAY BE SET ASIDE



PICTURED IS THE STEERING WHEEL WITH THE TRIM RING AND CENTER CAP REMOVED

Step Two- Hold the bare steering wheel up to the steering hub, re-insert a minimum of two Allen head screws and tighten till snug.



Step Three- Using your extension, 18mm socket, and ratchet, remove the steering shaft nut. Thread the nut back on about 3 threads and give the steering wheel a few firm pulls. This should free the steering hub from the shaft and the assembly can be removed.

